

Digital Electronic Thermostat TS-ET

Description:

The TS-ET2 is a 2-8 Stage Programmable Electronic Thermostat with the option of a remote Set point, Low Limit and Setback, compatible with Building Management Systems. The unit can control up to 8 stages of heating and/or cooling.

Technical Specification:

Temperature sensor: 10k3A1thermistor for Control and

frost Override

- 5°C to +95°C Temperature range: Diff between stages: 1°C to 9°C

Ext Set point Range: -5°C to +95°C Adjustable

Night set back: Volt free contacts

Offset pot: 1k-11k, range -3°C to +3°C of

set point

-5°C to 95°C Low Limit Range: **External set point:** 1k-11k Between Stage delay: 1-900 seconds

24Vac/dc 100,140,185, 225mA max Supply:

Output: 2 - 8 SPCO contacts 8A (3A)

@ 230Vac

Dimensions: 2 Stg 137W x 85D x 62H

> 4 Stg 185W x 85D x 62H 6 Stg 230W x 85D x 62H 8 Stg 275W x 85D x 62H

Order Codes:

TS-ET2 2 Stage Electronic Thermostat TS-ET4 4 Stage Electronic Thermostat TS-ET6 6 Stage Electronic Thermostat TS-ET8 8 Stage Electronic Thermostat

Features:


- Adjustable temperature range
- Night setback input
- Heating and/or cooling function
- 2 line, 32 Character Display
- Adjustable between stage diff.
- Din Rail Mounting
- 4 Sizes Available

 
Installation an operation


- Disconnect power before carrying out any work on the TS-ET
- 2. Maximum Wire size 2.5mm² take care not to over tighten the terminal screws.
- 3. Follow the wiring diagram below. Power supply must be 24Vac/dc

Set up

Power on: the display will show Temperature, Set point, Delay and Relay Status. To enter the set up menu press and hold the "ENTER" button for 3 seconds, if a pin code has been set enter your pin and press enter, adjust set point using the UP/DOWN and ENTER button. If sensor 2 is fitted enter low limit and press ENTER. Set Night setback and press ENTER if an external set point is fitted enter upper and lower limit and press ENTER. Enter stage differential and press ENTER. Enter between stage delay and press ENTER Set "h" for heating, "c" for cooling or "x" for not used on each stage and press ENTER if a new PIN is to be entered use UP/DOWN and ENTER button if no pin is to be set leave as "0000" and press enter. New parameters will only be saved if the last step is completed. If the display times out during setting the new settings will not be saved.

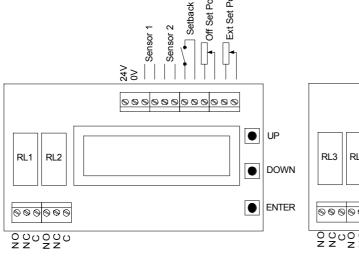



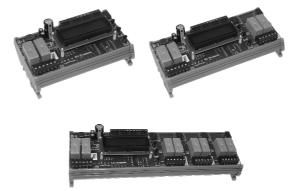

EC Products Limited

EC House, Amberley Way, Hounslow, Middlesex. TW4 6BH. United Kingdom Tel:+44 (0)20 8569 4100 Fax: +44 (0)20 8569 4111